

Installation Instructions

Instrucciones de Instalación

Instructions d'installation






Einbauanweisungen

T-500
1.03"
(26mm)

T-502
1.28"
(33mm)

T-503
2"
(51mm)


HAR-034 (white)
HAR-035 (beige)
HAR-036 (cream)

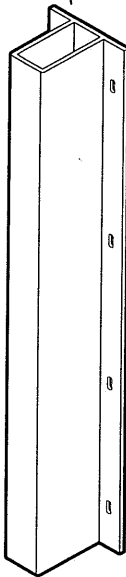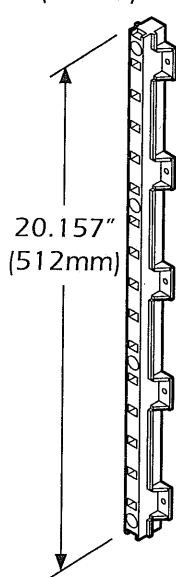

T-531

1.28" Short (33mm)

HAR-045 (white)
HAR-046 (beige)
HAR-047 (cream)

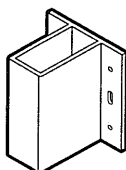

Available in white (-00), beige (-01), cream(-02), black(-03), and metallic (-04).

Disponible en blanco (-00), beige (-01), crema (-02), negro (-03) y metal (-04)

Disponible en blanc (-00), beige (-01), crème (-02), noir (-03) et métallique (-04)

Erhaeltlich in den Farben weiss (-00), beige (-01), creme (-02), schwarz (-03) und metallisch (-04)

TENN-TEX
PLASTICS INC.

www.quiktray.com
www.tenntex.com



Made in USA


FRAMELESS

1

T-500
1.03"
(26mm)

T-502
1.28"
(33mm)

T-503
2"
(51mm)

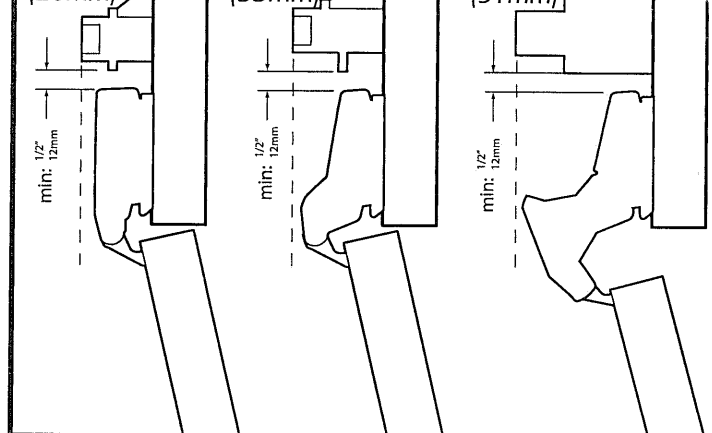


2

Cabinet sides must be min. 1/2" (12.7mm) thick

El panel lateral debe ser de un mínimo de 1/2" (12.7mm) de grosor

Minimum 1/2" (12.7mm) d'épaisseur demande pour les panneaux latéraux.

Seitenwand Dicke muss mindestens 1/2" (12.7mm) sein

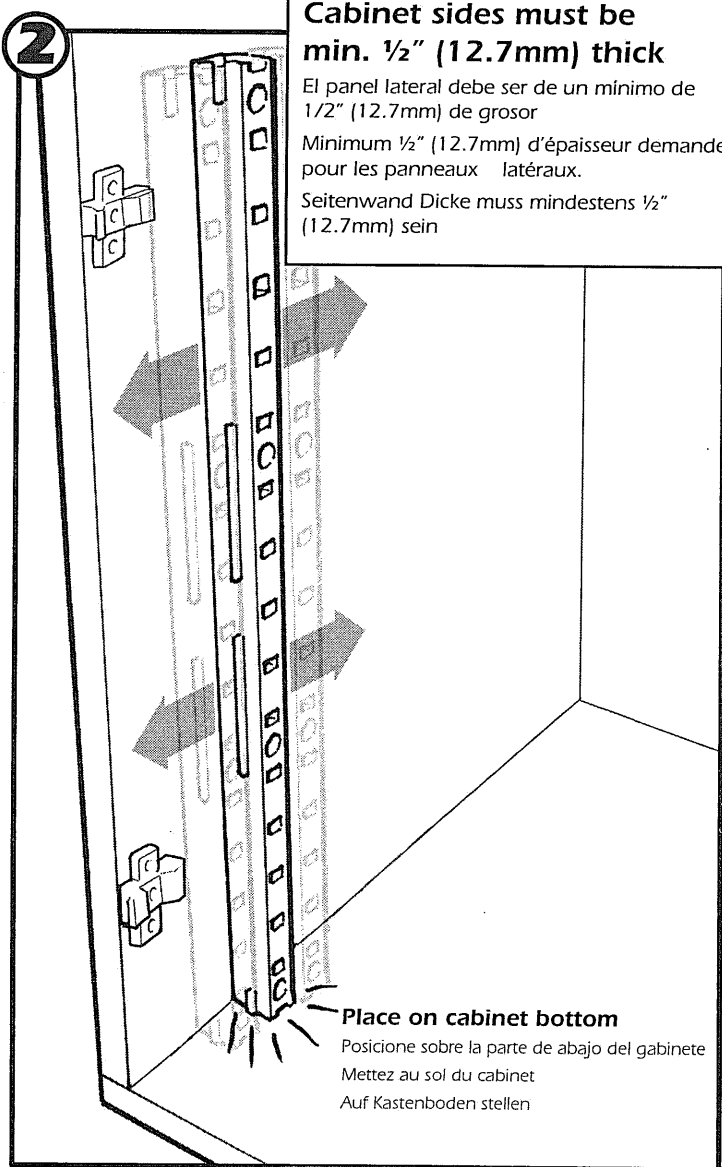

Place on cabinet bottom

Posicione sobre la parte de abajo del gabinete

Mettez au sol du cabinet

Auf Kastenboden stellen